

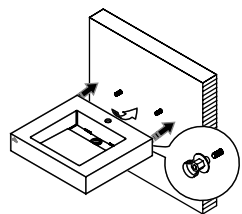
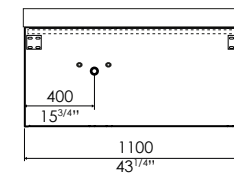
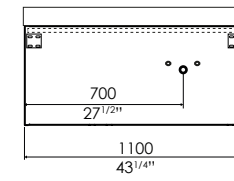
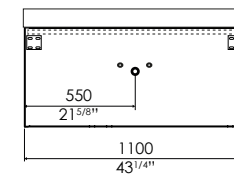
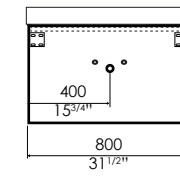


1






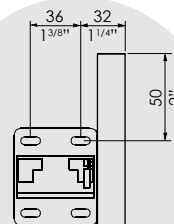


- First, assembly Ras worktop to the wall (see worktop instructions).
- Primero, montar el lavabo Ras a pared (seguir las instrucciones de la encimera).
- Tout d'abord, monter le plan de vasque au mur (voir les instructions de le plan de vasque).

2

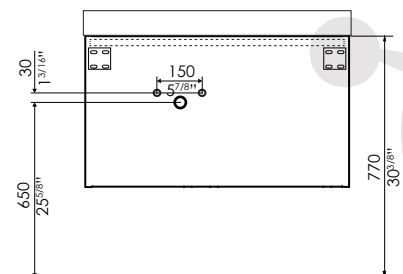

3

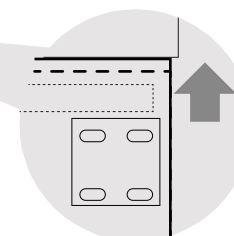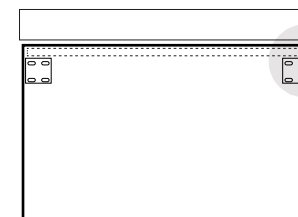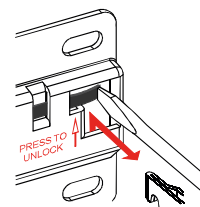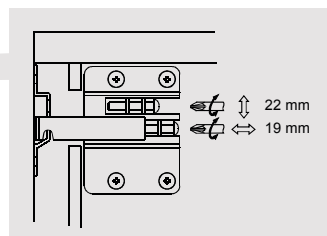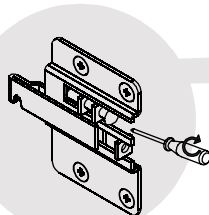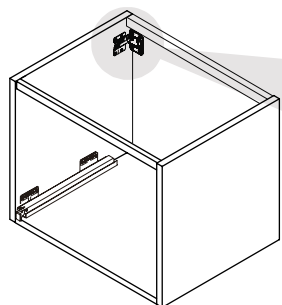

- Fix the fitting to the minimum height and raise the furniture up to worktop base.
- Fijar el herraje a la altura mínima y subir el mueble hasta ajustar con la base del lavabo.
- Fixer la ferrure au hauteur minimale et élever le meuble jusqu'a la base de plan de vasque.